



Asus ROG GL551J RAM Replacement

Asus ROG GL551J guide on how to remove and replace the RAM

Written By: Jason Nguyen



INTRODUCTION

Use this guide to replace the RAM on your Asus ROG GL551J. Make sure that any new RAM has a DDR3 connection type to correctly fit into this device.

Step 1 — Battery



- Lay device on a flat surface with battery facing up.

Step 2



- Locate latch below battery and push right.

Step 3



- Battery should release upwards. Pull battery out.

Step 4 — RAM




- Lay laptop on flat surface with the underside facing up. Unscrew the back panel.

Step 5



- Slide back panel out and remove.

Step 6

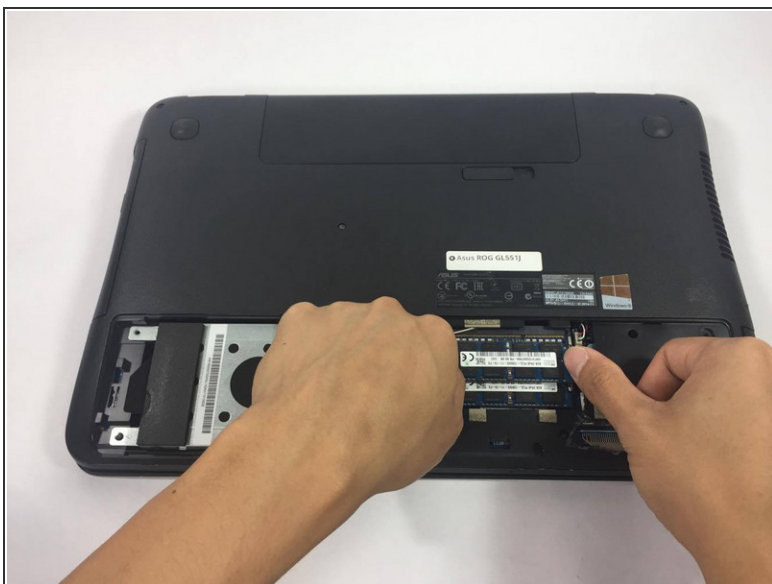

- Place thumbs on the locking tabs of both sides of the RAM stick and push outwards to unlock.

Step 7



- RAM should pop up at about 45 degrees. Pull outwards with fingers on the side of the RAM to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 11:15:16 PM.